




Stainless steel shower hinge

StanleyBlack&Decker


Stanley Black & Decker
<http://www.stanleygmt.com>

Model no.


Unit: mm

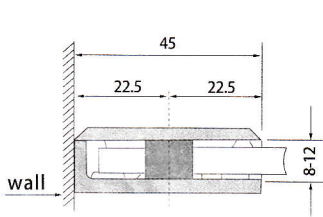


BJ-801

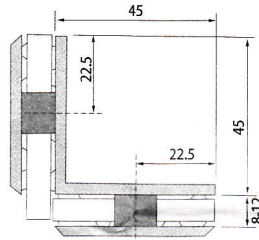


BJ-802

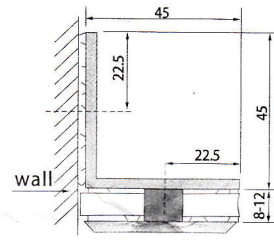


BJ-803

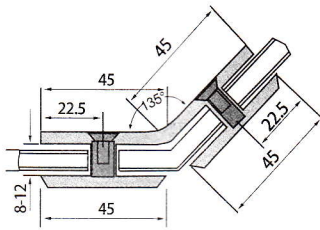

BJ-804

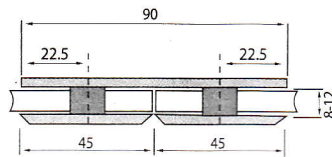

BJ-805

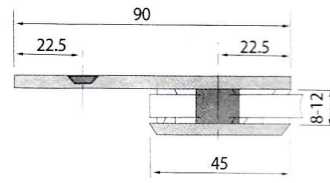

BJ-806

Technical Details:

- Ensure the wall is strong enough.
- Suitable for glass thickness 8~12mm.
- Drill holes on the glass before installation.
- Fasten all of the fixing screws.

The real size for making a hole and hollow on the glass door

The size is suitable for model No.

BJ-801




BJ-802

BJ-806

BJ-803

BJ-804

BJ-805

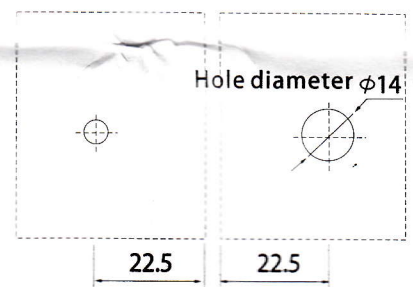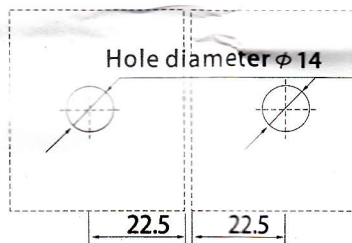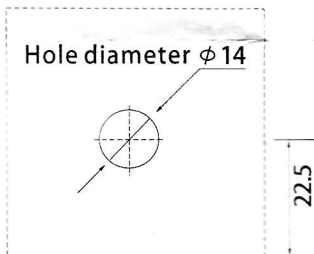

Note: It's necessary to temper the glass after making a hole.